


FULL BELLY SKID PLATE



HONDA FOREMAN 2012-2013 H-FBSP-FOR 500 12-13

2012 Foreman 500 Full Belly Skid Plate (FBSP) front & rear installation instructions

* NOTE: SIDE BENDS LEFT OUT FOR CLEARER VIEW

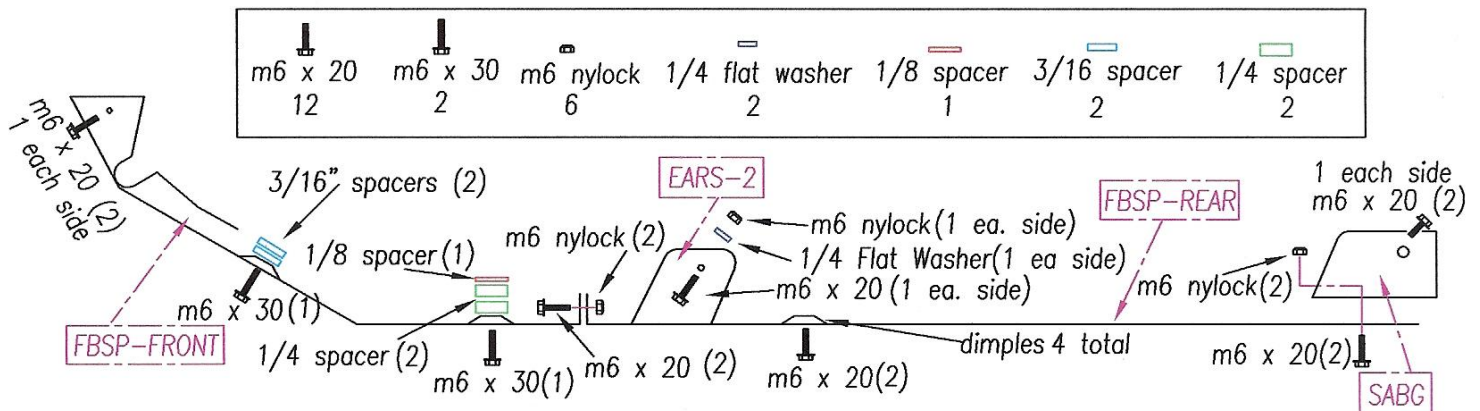

You must remove the plastic stock skid plate, you will not need the bolts or rivets. Carefully study the above dwg., it is a side view of the FRONT & REAR & SABG (straight axle boot guard) FBSP. (1) Begin by bolting front and rear FBSP together on flat surface, tighten completely these 2 m6 x 20 bolts/nuts. Loosely bolt together the REAR FBSP & the SABG as shown, then using duct tape strips, secure the spacer washers inside the FRONT FBSP over the 2 dimples as shown above. Place the assembly in position making sure that the ears on the REAR FBSP fit over the plastic shrouds each side. With assembly held in position start the 2 m6 x 20 bolts in the only 2 dimples in the REAR FBSP. Using the 2 m6 x 30 bolts, loosely screw in the 2 dimples in the FRONT FBSP. Loosely screw in the m6 x 20 bolts in the upper 2 side holes in the FRONT FBSP. Position the SABG over the ATV tabs and loosely screw in the m6 x 20 bolts each side into the welded nuts on the tabs. You can now tighten all the bolts starting in the rear working your way forward. DO NOT OVER TIGHTEN! Bolt together the REAR FBSP EARS to the plastic with m6 x 20 bolts thru the aluminum then place flat washers over the plastic inside then install the nuts. Tighten these 2 bolts/washers/nuts. Installation is complete.